

Teledyne Spinnaker install

2024/11/25

Download SpinnakerSDK

- SpinnakerSDK_FULL_4.0.0.116_x64.exe




Welcome to the Spinnaker 4.0.0.116 (x64) Setup Wizard

The Setup Wizard will install Spinnaker 4.0.0.116 (x64) on your computer. Click Next to continue with the installation.

Exit

Next

Check Accept

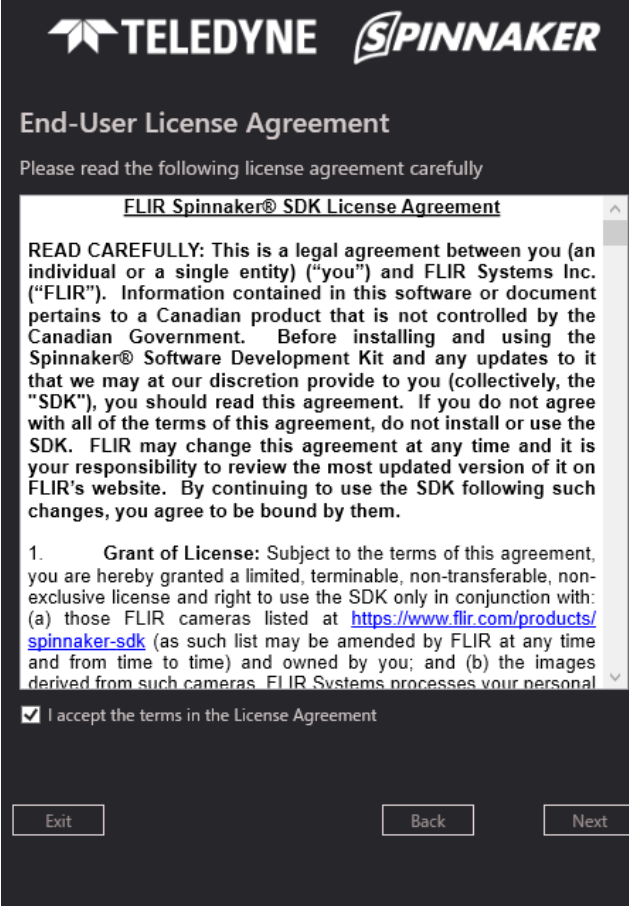

TELEDYNE SPINNAKER

End-User License Agreement

Please read the following license agreement carefully

FLIR Spinnaker® SDK License Agreement


READ CAREFULLY: This is a legal agreement between you (an individual or a single entity) ("you") and FLIR Systems Inc. ("FLIR"). Information contained in this software or document pertains to a Canadian product that is not controlled by the Canadian Government. Before installing and using the Spinnaker® Software Development Kit and any updates to it that we may at our discretion provide to you (collectively, the "SDK"), you should read this agreement. If you do not agree with all of the terms of this agreement, do not install or use the SDK. FLIR may change this agreement at any time and it is your responsibility to review the most updated version of it on FLIR's website. By continuing to use the SDK following such changes, you agree to be bound by them.

1. **Grant of License:** Subject to the terms of this agreement, you are hereby granted a limited, terminable, non-transferable, non-exclusive license and right to use the SDK only in conjunction with: (a) those FLIR cameras listed at <https://www.flir.com/products/spinnaker-sdk> (as such list may be amended by FLIR at any time and from time to time) and owned by you; and (b) the images derived from such cameras. FLIR Systems processes your personal

I accept the terms in the License Agreement

Exit Back Next

Check Application Development

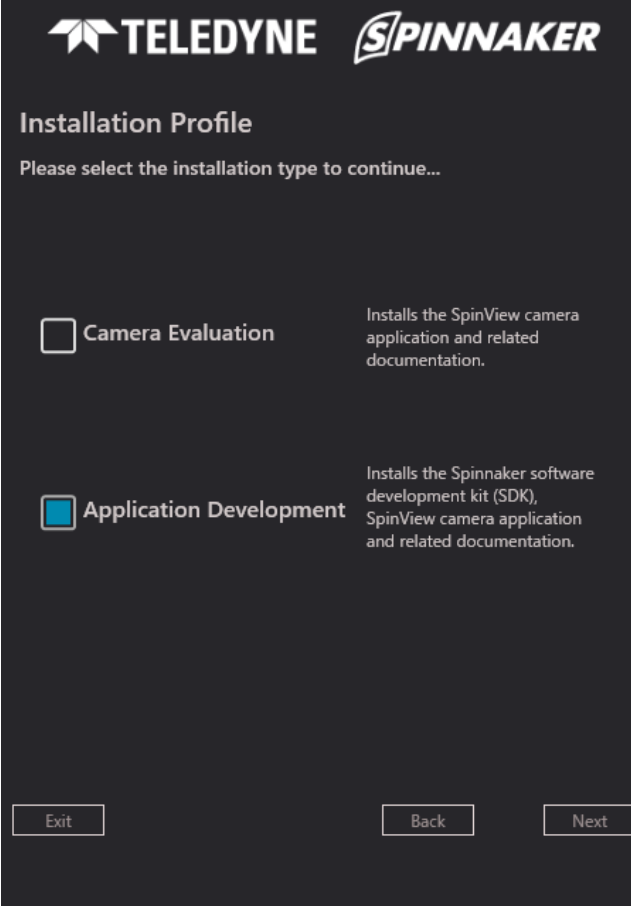

TELEDYNE *SPINNAKER*


Installation Profile

Please select the installation type to continue...


Camera Evaluation Installs the SpinView camera application and related documentation.

Application Development Installs the Spinnaker software development kit (SDK), SpinView camera application and related documentation.

Uncheck GigE Driver

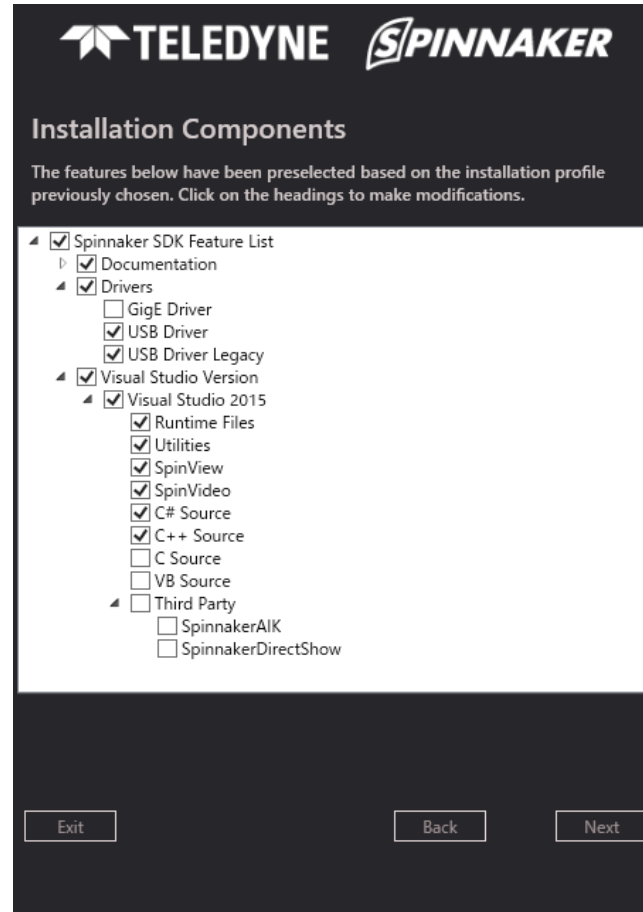

Uncheck “I will use GigE Camera”

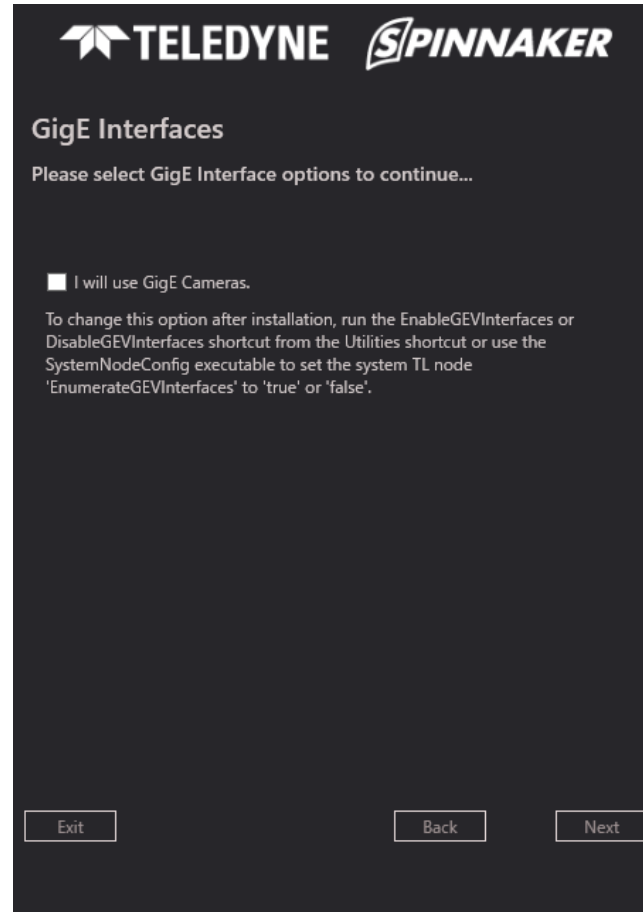



Ready to install Spinnaker 4.0.0.116 (x64)

Click Install to begin the installation. Click Back to review or change any of your installation settings. Click Exit to exit the wizard.

Installation Folder: ...

Exit

Back

Install

 **TELEDYNE** *SPINNAKER*



Package Progress: APIDocs: 97%

Installing APIDocs: Documentation

Cancel



Spinnaker Installation Completed

Open the Getting Started documentation

Exit